

SPECIFICATIONS

Range:	-58 to 572°F / -50 to 300°C
Resolution:	0.1° from -20° to 200° 1° otherwise
Accuracy:	±1°C from -20 to 100°C ±0.4°C at tested points, ±1°C otherwise

ULTRA™ THERMOMETER ACCURACY

Ultra™ thermometers are tested at selected test points to be within tighter than normal tolerances to assist in providing improved accuracy. Other points will not necessarily fall within the same accuracy as those found at the selected test points, but will be within an accuracy of ±1°C.

OPERATION

1. Remove the protective sheath.
2. Press the ON/OFF button to turn the unit on.
3. Press the °F/°C button to toggle the display between displaying °F and °C.
4. Insert the stem of the thermometer into the material to be measured.

To use the protective sheath as a thermometer holder, slide the stem of the thermometer through the hole located at the end of the sheath.
5. Press the ON/OFF button to turn the unit off.
To conserve battery life, always turn the unit off when not in use.
6. Replace the protective sheath.

BATTERY REPLACEMENT

Erratic readings, a faint display, or no display, are all indicators that the battery must be replaced. Use a screwdriver to remove the battery cap by turning the cap counter-clockwise approximately 1/4 of a turn. *Turning the cap further than 1/4 of a turn may damage the cap.* Replace the exhausted battery with a new 1.5 volt, silver oxide, size 393 battery. Make certain the positive (+) side is visible. Replace the battery cap by turning the cap clockwise approximately 1/4 of a turn. *Turning the cap further than 1/4 of a turn may damage the cap.*

WARRANTY, SERVICE, OR RECALIBRATION

For warranty, service, or recalibration, contact:

CONTROL COMPANY

4455 Rex Road
Friendswood, Texas 77546 USA
Ph. 281 482-1714 • Fax 281 482-9448
E-mail sales@control3.com • www.control3.com

Control Company is ISO 9001:2008 Quality-Certified
by DNV and ISO/IEC 17025:2005 accredited as a
Calibration Laboratory by A2LA.